


SOFT WATER INJECTOR FEED KIT

20015X103

- 1) Shut off main water supply and relieve system line pressure.

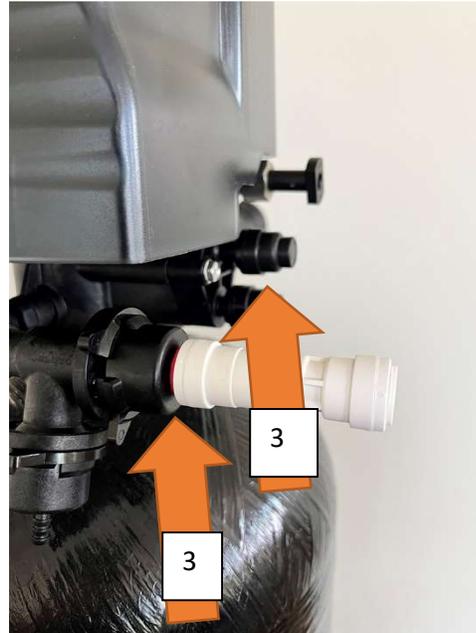

- 2) On the aeration valve, remove existing tubing and black 3/8 couplers connecting air intake to the control valve.
- 3) Push white 3/8 check valve (red end) onto the air intake. Arrow indicator on the check will be pointing towards valve; then push on 3/8 plug on control valve.
- 4) Remove outlet elbow from bypass of existing softener and main water line.
- 5) Apply Teflon tape to 3/8 stem threads and screw into drilled & tapped elbow.
- 6) Push 3/8 x 3/8 elbow (removed from aerator valve) onto stem.
- 7) Reattach elbow to bypass and main water line (shown below).



3/8 check valve

- 8) Connect 3/8 tubing with shutoff valve into 3/8 x 3/8 elbow.
- 9) Turn main water supply back on and check for leaks. Run service water to evacuate excess air.